

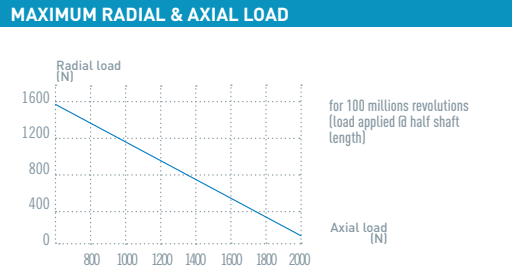


MOTORS POWER MTE 10 / NTE 10 950-1300 W

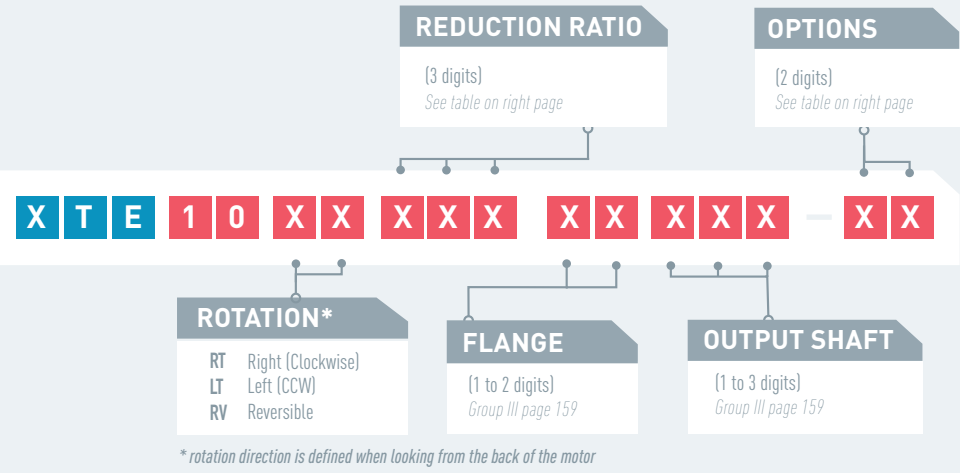

LAYOUT MTE 10 XT MTE 10 RV

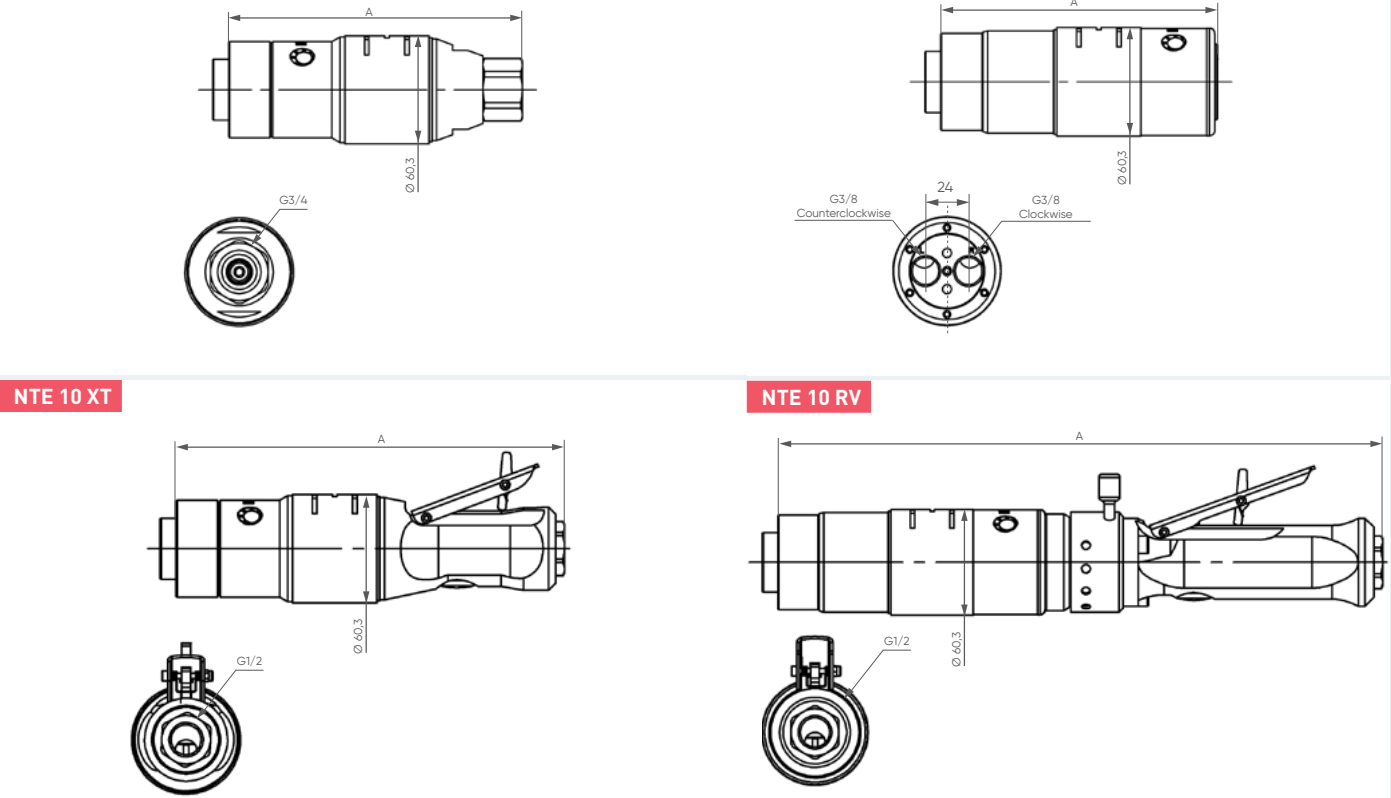

PERFORMANCES	MTE / NTE 10		Air supply pressure	Speed (rpm)		Torque (N.m)			Max Power (W)	Air cons (Nl/min)	Dimensions		
	Air motor reference	Reduction ratio		@ max Power	Free	@ max Power	Max (stall)	Starting torque			A (mm)	Ø (mm)	Weight (kg)
	MTE 10 XT 001	001	6,2 bars	7700	15400	1,4	2,0	1,7	1100	1600	164,1	60,3	1,2
			5 bars	7300	14600	1,1	1,7	1,4	830	1200			
			4 bars	6900	13800	0,82	1,4	1,1	590	1000			
	MTE 10 RV 001	001	6,2 bars	8200	16400	1,5	2,2	1,9	1300	1600	154,6	60,3	1,4
			5 bars	7700	15400	1,2	1,8	1,6	1000	1300			
			4 bars	7300	14600	0,91	1,4	1,2	700	1000			
	NTE 10 XT 001	001	6,2 bars	9200	18400	1,3	2,0	1,7	1250	1600	216,6	60,3	1,4
			5 bars	8500	17000	1,1	1,7	1,4	940	1300			
4 bars			7800	15600	0,83	1,3	1,1	680	1000				
NTE 10 RV 001	001	6,2 bars	7200	14400	1,2	1,7	1,5	950	1400	346,1	60,3	2,0	
		5 bars	6700	13400	1,0	1,4	1,3	700	1200				
		4 bars	6200	12400	0,78	1,1	0,98	500	1000				

For connection and lubrication, see page 73 Data indicated in this table have an accuracy of +/- 5%

OPTIONS AVAILABLE FOR THE MTE10																																				
Collected exhaust*	01	02					07	09	10	11										21	22	23	27	28							36	37				
ATEX certification		02					07				12	13	14	15						21	22	23				29	30	31	32		36	37				
Left/Right switch*			03								12				16	17					22	23					30									
Lubrication free				04				09				13			16		18			21			27				30									
Kit start					05				10					14		17		19			22			28			30		32							
Speed control**						06									15		18	19																		
Stainless steel										11												23	27	28					31	32						
Code	01	02	03	04	05	06	07	09	10	11	12	13	14	15	16	17	18	19	21	22	23	27	28	29	30	31	32	36	37							
															</																					

* Reversible motors only ** Non reversible motors only

OPTIONS AVAILABLE FOR THE NTE10XT																															
Collected exhaust	01	02	04	05	06	07	09	10	13	14	15	18	19	21	22	31	32														
ATEX certification																															
Lubrication free																															
Kit start																															
Speed control																															
Code	01	02	04	05	06	07	09	10	13	14	15	18	19	21	22	31	32														

FOR THE NTE10RV						
ATEX certification	03	12	16	17	29	30
Left/Right switch						
Lubrication free						
Kit start						
Code	03	12	16	17	29	30

POWER, SPEED, TORQUE AND AIR CONSUMPTION GRAPHS

